

FEATURES

- Field-Bus remote data acquisition
- RS-485 Master/Slave communication type
- MODBUS RTU/ASCII
- 4 channel input
- RTD, Resistance and Potentiometer configurable input
- Watch-Dog Alarm
- Remotely Configurable
- 2000 Vac 3-way Galvanic Isolation
- High Accuracy
- EMC compliance – CE mark
- DIN rail suitable mounting - EN-50022 compliance

GENERAL DESCRIPTION

The SS 3014 device is able to acquire up to 4 analog input signals. data values are transmitted with MODBUS RTU/ASCII protocol on the RS-485 network (RS-232 interface is available).

It is possible to connect RTD , Potentiometers or Resistance signals.

By means of a 16 bit converter, the device guarantee a high accuracy and a stable measure versus time and temperature.

To ensure the plant safety, two Watch-Dog timer alarms are provided.

The 2000 Vac isolation between input, power supply and serial line removes eventual ground-loop effects, allowing the use of the device even in the heavy environmental conditions.

SS 3014 is in compliance with the 89/336/CEE directive on the electromagnetic compatibility.

The device is housed in a rough self-extinguishing plastic container which, thanks to its thin profile of 17.5mm only, allows a high density mounting on EN-50022 standard DIN rail.

COMMUNICATION PROTOCOLS

The SS3014 is designed to work with the MODBUS RTU/ASCII protocol: standard protocol in field-bus; allows to directly interface SS3000 series devices to the larger part of PLCs and SCADA applications available on the market.

For the protocol instructions, see the relative User Guide.

USER INSTRUCTIONS

Before to install the device, please read the “Installation Instruction” section.

If the module configuration is unknown, it can be hardly to establish a communication with them; connecting the INIT terminal to the GND terminal (ground), at the next power-up the device will be auto-configured in the default settings (see Operating User Guide).

Connect power supply, serial bus and analog inputs as shown in the “Wiring” section.

The “PWR” LED state depending to the working condition of the device: see the "Light Signalling" section to verify the device working state.

To perform configuration and calibration operations, read the instructions in the Operating User Guide.

To simplify handling or replacing of the device, it is possible to remove the wired terminals even with the device powered.

TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in the nominal conditions)

Input type	Min	Max					
RTD 2 or 3 wires			Input Calibration (1)		Power Supply		
Pt100	-200°C	850°C	RTD	±0.05 % f.s.	Supply Voltage	10 .. 30 Vdc	
Pt1000	-200°C	200°C	Res.	±0.05 % f.s.	Current consumption	30 mA @ 24 Vdc	
Ni100	-60°C	180°C	Pot.	±0.05 % f.s.	Polarity inversion protection	60 Vdc max	
Ni1000	-60°C	150°C	Linearity (1)		Isolation		
			RTD	+/-0.1%	Input – RS485	2000 Vac 50 Hz, 1 min.	
RES. 2 or 3 wires			CJC Thermal drift		Supply – Input	2000 Vac 50 Hz, 1 min.	
Low	0 Ω	500 Ω	Full Scale	± 0.02 °C/ °C	Supply – RS485	2000 Vac 50 Hz, 1 min.	
High	0 Ω	2000 Ω	Lead wire resistance influence (1)		Temperature & Humidity		
			RTD/res.3 wires	0.05 %/Ω (50 Ω max balanced)	Operating temperature	-10°C .. +60°C	
POT. (nom. value)			RTD excitation current		Storage temperature	-40°C .. +85°C	
Low	20 Ω	500 Ω	Typical	0.350 mA	Humidity (non condensing)	0 .. 90 %	
High	20 Ω	2000 Ω	Thermal drift (1)		Housing		
			Full scale	± 0.005 % / °C	Material	Self-extinguishing plastic	
			Rise time	0.5 ÷ 2 sec.	Mounting	EN-50022 DIN rail	
			Data Transmission		Weight	~ 150 g.	
			Baud Rate	38.4 Kbps	EMC		
			Max. distance	1.2 Km	Immunity	EN 61000-6-2	
			Warm-up time	3 min.	Emission	EN 61000-6-4	
			(1) Referred to input Span (difference between max. and min. values)				

INSTALLATION INSTRUCTIONS

The SS 3014 device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:


When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following case:

- If panel temperature exceeds 45°C and at least one of the overload conditions exist.

Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel. Install the device in a place without vibrations.

Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters etc...) and to use shielded cable for connecting signals.


CABLING

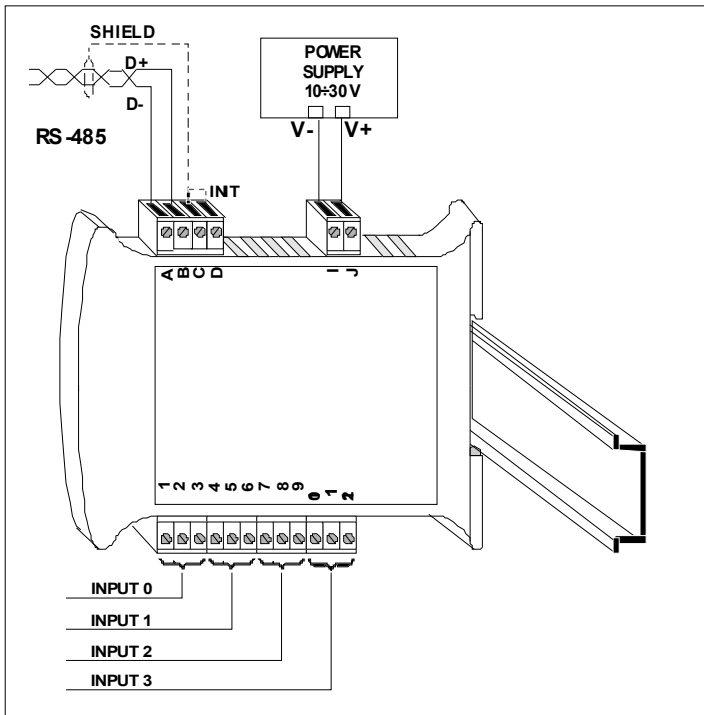

LIGHT SIGNALLING


LED	COLOUR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered / Wrong RS-485 cabling.
		FAST BLINK	Communication in progress (blink frequency depends to baud-rate)
		1 second BLINK	Watch-Dog Alarm condition

MECHANICAL DIMENSIONS (mm)

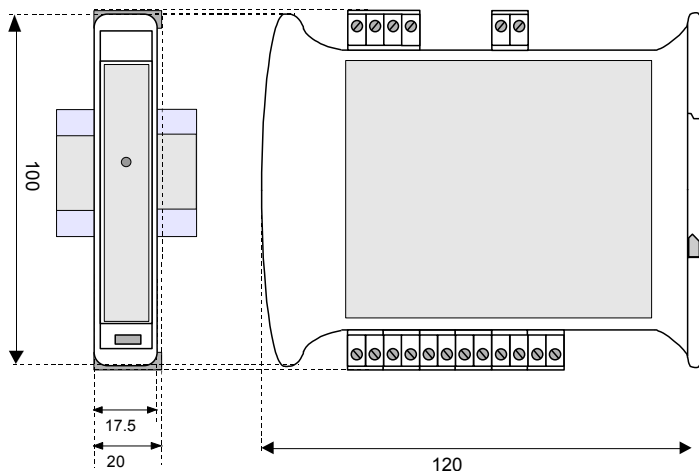


WIRING


ANALOG INPUT WIRING

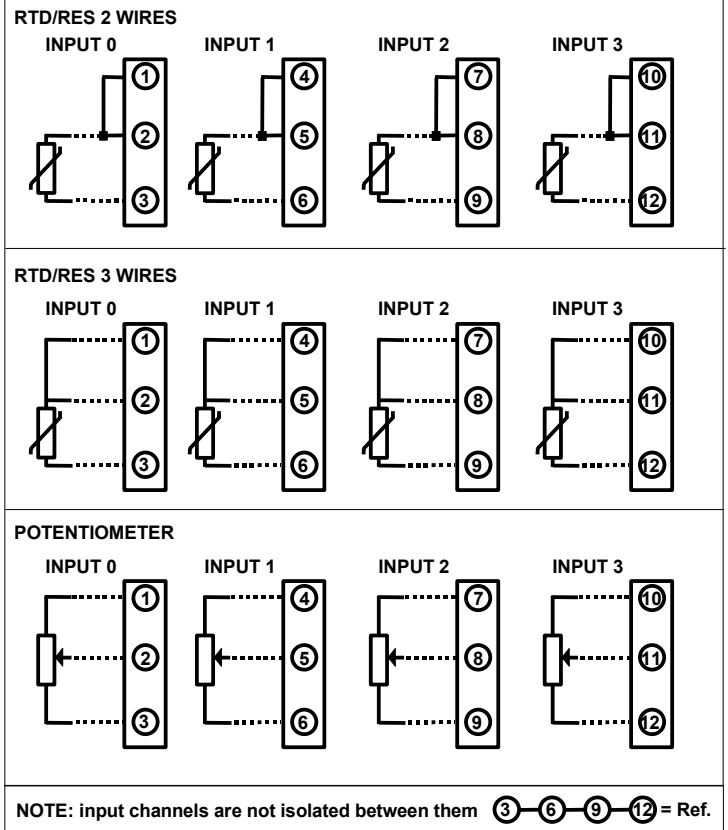


RS-485 NETWORK WIRING

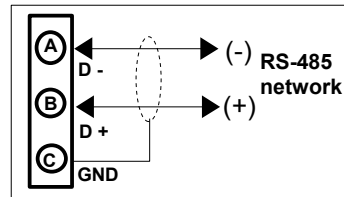


RS-232 NETWORK WIRING

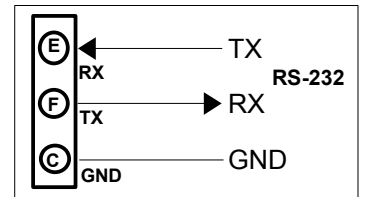


POWER SUPPLY WIRING

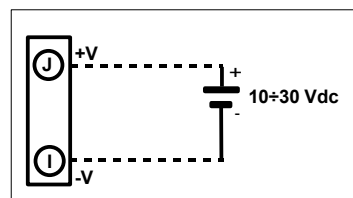

INIT WIRING

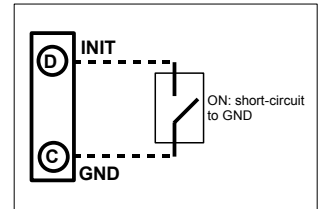

ISOLATION STRUCTURE

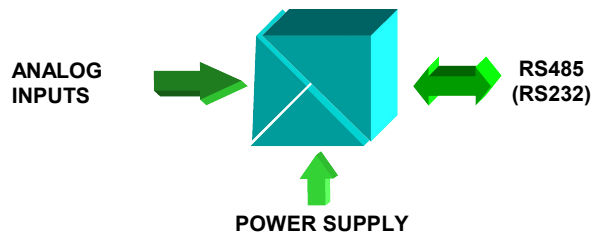

HOW TO ORDER

In the order phase, it is mandatory to specify the interface type (RS485 or RS232). SS3014 can be supplied with the configuration specified by the customer. Please refer to the "Technical Specification" section for the output type available.

ORDER CODE:

SS 3014 / M / 485 / Pt100

Protocol type
M: MODBUS protocol.

Interface type
485 : RS-485
232 : RS-232

Input type

■ = Requested
□ = Optional