

SIELCO SISTEMI srl

via Roma, 24 - 22070 Guanzate (CO) – Italy Tel: +39 031899671 – Fax: +39 031976966

e-mail: info@sielcosistemi.com website: http://www.sielcosistemi.com

FEATURES

- Interface Ethernet 10/100 Base-T, Modbus TCP Server
- N.16 Digital inputs
- Built-in Web server to acquire the digital inputs state via web browser
- Remotely programmable
- Connection by removable screw-terminals
- LED signalling for Link/Act Ethernet, power supply
- LED signalling for digital inputs state
- Galvanic isolation on all the ways
- EMC compliant CE mark
- In compliance to EN-50022 DIN rail mounting

Modbus TCP/IP server 16 Digital Inputs \$\$ 8148





GENERAL DESCRIPTION

The device SS8148 is a Modbus TCP server unit with 16 digital input channels.

For the digital inputs are available up to 4 counters at 32 bit with measure of frequency up to 300 Hz.

The Ethernet interface allows to read and write in real time the value of device's internal registers.

The built-in Web Server of SS8148 allows the remote visualization and acquisition of the digital inputs state and access to and configure the main Ethernet parameters via web browser.

The device SS8148 realizes a full electrical isolation between the lines, introducing a valid protection against the effects of all ground loops eventually existing in industrial applications.

The LEDs of signalling of Ethernet activity, input and power supply allow a direct monitoring of the system functionality.

The connection is made by removable screw-terminals (inputs and power supply) and RJ45 plug (Ethernet).

The device is housed in a rough self-extinguishing plastic enclosure which, thanks to its thin profile of 22.5 mm only, allows a high density mounting on EN-50022 standard DIN rail.

TECHNICAL SPECIFICATIONS (Typical @ 25 °C and in the nominal conditions)

In compliance with Ethernet IEEE 802.3		Digital Inputs Channels	16	Power supply Current consumption	10 ÷ 30 Vdc 60 mA typ @24 Vdc(standby) 140 mA max @24Vdc
Network interface Protocol Max. cable length	Ethernet 10/100Base-T Modbus TCP 100 meters	Channels Input voltage (bipolar) OFF state ON state Impedance Sample time Number of counters Counters register bit-length Counters frequency Minimum pulse width	16 0 ÷ 3 V 10 ÷ 30 V 4.7 KΩ 5 ms 4 32 bit up to 300 Hz 1 ms	Isolations Power supply / Ethernet Inputs / Ethernet Inputs 0÷7/ Inputs 8÷15 Inputs / Power supply Temperature & Humidity Operative temperature Storage temperature Relative humidity (not cond.) Connections Ethernet Inputs / Supply Housing Material Mounting Dimensions in mm.(WxHxT) Weight	140 mA max @24Vdc 230 mA max 1500 Vac, 50 Hz, 1 min. 1500 Vac, 50 Hz, 1 min.
				EMC (for industrial enviror Immunity Emission	

INSTALLATION INSTRUCTIONS

The device is suitable for fitting to DIN rails in the vertical position.

It is always a good thing to space the devices together 5mm. Make sure that sufficient air air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat. Install the device in a place without vibrations. It is also suggested to avoid routing conductors near power signal cables and to use shielded cables for connecting signals.

MODULE CONFIGURATION

To configure the SS8000 series devices, it is necessary to enable the **INIT** mode. This mode allows you to access the device with the following default parameters :

IP Address:192.168.1.174 (DHCP disabled), or IP provided by DHCP (if enabled)
Modbus Address: 245

To enter the INIT mode follow these steps:

- Turn off the device;
- Connect the INIT terminal to the -V terminal as shown in figure.
- Turn on the device and connect with an internet browser to the device using the default parameters listed above and using the default login credentials:

Username: admin Password: admin

To exit INIT mode follow these steps:

- Turn off the device;
- Remove the INIT connection;
- Turn on the device and connect with the new parameters.

RESET FUNCTION- "P" BUTTON

If it is necessary to restore the default device parameters, with device powered and not in INIT condition, push the front located "P" button for at least 5 seconds.

The green led PWR will switch-off, the yellow led STS will become orange and the reset of the device will occur. When the reset procedure will be finished, both the leds will set back to the default condition and the following parameters will be loaded:

Ethernet:

- IP Address: 192.168.1.100 - Subnet Mask : 255.255.255.0 - Gateway Mask: 192.168.1.1 Username: admin Password: admin

Modbus Address: 1

MAPPATURA REGISTRI MODBUS


Register Winlog Position Syntax		Description	Access
40007	3:06	Node ID	R/W
40011	3:10	System Flags	R/W
40013	3:12	Watchdog timer	R/W
40032	3:31	Digital Inputs	RO
40033	3:32	Digital Inputs Rise Latch	R/W
40034	3:33	Digital Inputs Fall Latch	R/W
40035	3:34	Freq. Digital Input 0	RO
40036	3:35	Freq. Digital Input 1	RO
40037	3:36	Freq. Digital Input 2	RO
40038	3:37	Freq. Digital Input 3	RO
40039	35:38	32 bit Counter Digital Input 0	R/W
40041	35:40	32 bit Counter Digital Input 1	R/W
40043	35:42	32 bit Counter Digital Input 2	R/W
40045 35:44		32 bit Counter Digital Input 3	R/W


LIGHT SIGNALLING

LED	COLOUR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered
		BLINK	Watchdog alarm
STS	YELLOW	OFF	Device in RUN modality
		BLINK	Device in INIT modality
l n	RED	ON	Digital Inputs High Level (1)
		OFF	Digital Inputs Low Level (0)


CONNECTIONS


POWER SUPPLY





DIGITAL INPUTS

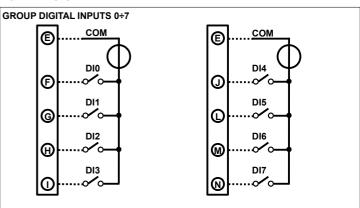

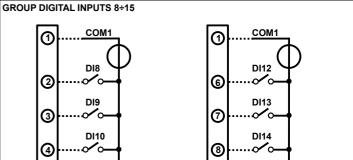

DI15

9

NOTES:


the input channels from 0 to 7 are not isolated between them .

DI11

the input channels from 8 to 15 are not isolated between them

The group of input channels 0÷7 is isolated from the group of input channels 8÷15.

MECHANICAL DIMENSIONS (mm)

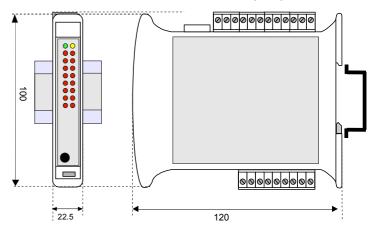

HOW TO ORDER

" SS 8148 "

Note: the device is provided with default configuration as:

IP address: 192.168.1.100 Modbus address: 1